

- 1 HEADLIGHT 31517/18 Chrome 31464/65 Blackout
- **2** HOOD ORNAMENT

72001 Swan**72003** Bassett Hound**72026** "Daytona" Grip

- 3 HOOD MIRROR 60037 8 ¹/₂" Retractable Arm
- **60037** 8 ¹/₂" Retractable Ar
 - 42771/72 Mirror Assembly
 42782 Mirror Frame with Defrost
 42780 Main Mirror with Defrost
 42781 Lower Mirror with Defrost
- 5 AIR INTAKE/TRIMS

 29051
 Air Intake Logo Trim

 29052
 Hood Logo Trim

 41530/34
 LED Air Intake

- 6 FENDER LIGHT TRIM 29056 Fender Light Trim
- 7 HOOD LATCH COVER 41425 Hood Latch Cover
- 8 FOG/BUMPER LIGHT
 31234 Fog Light
 41538/39 Front Bumper Light Bezel
- FRONT WHEEL COVER

10257 Dome Front Axle Cover Set10252 Dome Front Axle Cover Setw/ Spike Nut Cover

10 REAR WHEEL COVER

10263 Dome Rear Axle Cover Set10275 Dome Rear Axle Cover Setw/ Spike Nut Cover

10278 Pointed Rear Axle Cover Set w/ Spike Nut Cover

11 DOOR HANDLE/COVER TRIM

42766/67 Exterior Door Handle **41710/13** Door Handle Cover **21906** Door Handle Trim

- 12 BUG SHIELD 29005 Bug Deflector
- **13** BACK STEP TRIM

29049 Back Lower Step Kick Plate29050 Back Upper Step Kick Plate

14 FRONT STEP TRIM

29053 Front Upper Step Kick Plate29054 Front Upper Step Kick Plate29055 Front Lower Step Kick Plate












Side **31464** Blackout,

Passenger Side

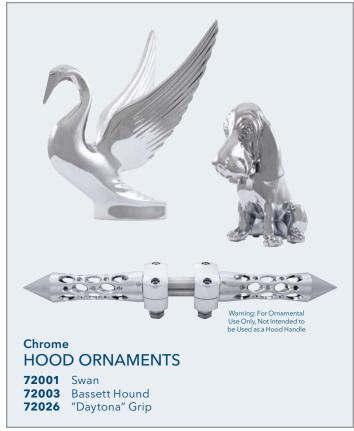



Side

Passenger Side

31518 Chrome,




















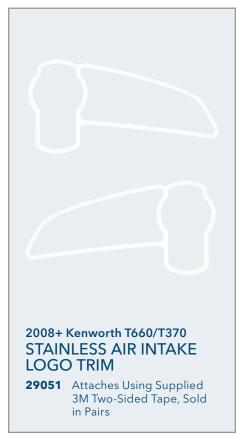





























Economy 33 mm Thread-On **DOME REAR AXLE COVER SET**

Includes 1 Cover, 1 Cap, and 10 Nut Covers Per Kit



33 mm Thread-On DOME REAR AXLE COVER **SET - SPIKE NUT COVER**

Includes 1 Cover, 1 Cap, and 10 Nut Covers Per Kit



33 mm Thread-On POINTED REAR AXLE **COVER SET - SPIKE NUT COVER**

Includes 1 Cover, 1 Cap, and 10 Nut Covers Per Kit





2001+ Kenworth/Peterbilt **EXTERIOR DOOR HANDLE**


42766 Driver Side **42767** Passenger Side





2005+ Kenworth/Peterbilt CHROME PLASTIC DOOR HANDLE COVER

41710 Driver Side **41713** Passenger Side

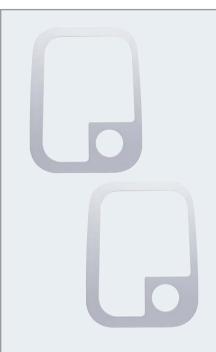

2005+ Peterbilt **STAINLESS DOOR** HANDLE TRIM

21906 Sold in Pairs



Kenworth T660
STAINLESS BUG DEFLECTOR
29005 Installation Hardware Included



2007+ Kenworth T660, T680, T700 STAINLESS BACK LOWER STEP KICK PLATE

29049 Attaches Using Supplied Hardware and 3M Two-Sided Tape, Sold in Pairs



29050 Attaches Using Supplied Hardware and 3M Two-Sided Tape, Sold in Pairs



2007-09 Kenworth T660 STAINLESS FRONT UPPER STEP KICK PLATE

29053 430 Stainless Steel, Sold in Pairs



2010+ Kenworth T660 STAINLESS FRONT UPPER STEP KICK PLATE

29054 430 Stainless Steel, Sold in Pairs



2007+ Kenworth T660 STAINLESS FRONT LOWER STEP KICK PLATE

29055 430 Stainless Steel, Sold in Pairs



UF160819







